<測量> 座標の逆計算

測量したデータを表にセットして点間距離や方位角をまとめて求められます。 条件のついた式でも求められます。 また、データを変更したときにワンタッチで対応する値が求められます。



これらを関数定義しておきます。

1. 測量したデータを表にセットし、 X_1, Y_1, X_2, Y_2 のセルを選んで「列の名前」 – 「登録」を します。

X ₁	Y ₁	X ₂	Y_2			
69.841	-106.511	76.518	-95.746			
76.518	-95.746	84.212	-97.025			
84.212	-97.025	88.207	-77.091			
88.207	-77.091	85.439	-59.305			
85.439	-59.305	69.841	-106.511			

2. 関数名を順次入力し、必要ならそのセルを選択して、計算結果のプロパティを設定して (結果を度・分・秒で表示する、桁数を指定する等)計算していきます。

X ₁	Y ₁	X ₂	Y ₂	Δx	Δ y		β			δ		L
69.841	-106.511	76.518	-95.746	6.677	10.765	58°	11'	27″	58°	11'	27″	12.668
76.518	-95.746	84.212	-97.025	7.694	-1.279	09°	26'	17''	350°	33'	43''	7.800
84.212	-97.025	88.207	-77.091	3.995	19.934	78°	40'	03″	78°	40′	03″	20.330
88.207	-77.091	85.439	-59.305	-2.768	17.786	81°	09'	15''	98°	50'	45″	18.000
85. 439	-59.305	69.841	-106.511	-15.598	-47.206	71°	42'	55″	251°	42'	55″	49.716

データの値を変えて計算しなおすことができます

3. 表を選択して、プロパティで「ファイルを開くときに再実行される式」にチェックを いれます。データを変更し、表を選択して、「実行」-「再実行」します。

X ₁	Y ₁	X ₂	Y ₂	Δx	Δ y		β			δ		L
39.841	-106.511	36.518	-95.746	-3.323	10.765	72°	50'	43''	107°	09'	17''	11.266
56.518	-95.746	54.212	-97.025	-2.306	-1.279	29°	00'	52″	209°	00'	52''	2.637
24.212	-97.025	38.207	-77.091	13.995	19.934	54°	55'	43''	54°	55'	43''	$24.\ 356$
18.207	-77.091	25.439	-59.305	7.232	17.786	67°	52'	22''	67°	52′	22″	19.200
75.439	-59.305	89.841	-106. 511	14.402	-47.206	73°	02'	01″	286°	57'	59''	49.354